


Snap-On Duffle Bag

Retro-Fit for footlocker with screwed hardware




Kit includes: 4 snaps.

Phillips screwdriver needed to install snaps.

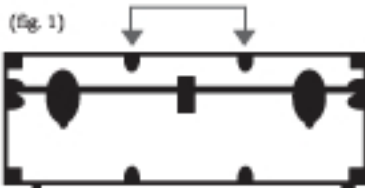


Step 1

Locate the 4 clamps on the top of the footlocker, 2 on the front and 2 on the back. (fig. 1)

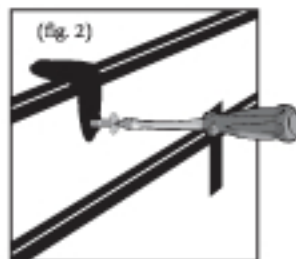

Step 2

Unscrew the screws from all 4 clamps using a phillips screwdriver. (fig. 2)

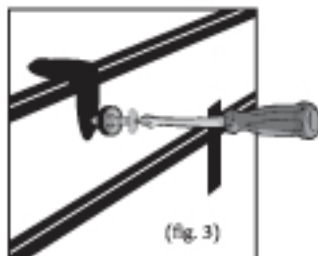

Step 3

Place each screw through the hole on each of the 4 snaps. Then, simply screw each snap onto the footlocker in the same spot they were removed originally in using a phillips screwdriver. (fig. 3)

Please see instructions on the reverse side for retro-fitting a footlocker with nailed hardware.