


Snap-On Duffle Bag

Retro-Fit for footlocker with nailed hardware




Kit includes: 4 screws, 4 snaps.

Tools needed: pencil, hammer, phillips screwdriver.

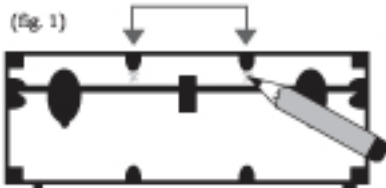


Step 1

Locate the 2 clamps on the front of the footlocker. Place a pencil mark about 1/2" below the bottom of each clamp. (fig. 1)

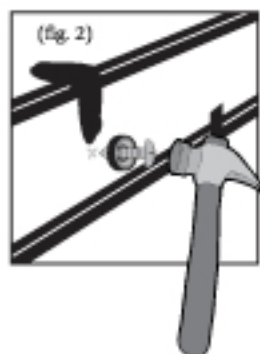

Step 2

Place a snap on your pencil mark and tap with a hammer until the screw on the snap pierces the steel exterior of the footlocker. Be careful not to tap your fingers with the hammer! (fig. 2)

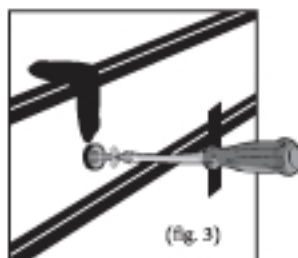

Step 3

After piercing the steel exterior, simply screw the snap in by hand using a phillips screwdriver. (fig. 3)

Step 4

Repeat steps 1 through 3 on the back side of the footlocker.

Please see instructions on the reverse side for retro-fitting a footlocker with screwed hardware.